


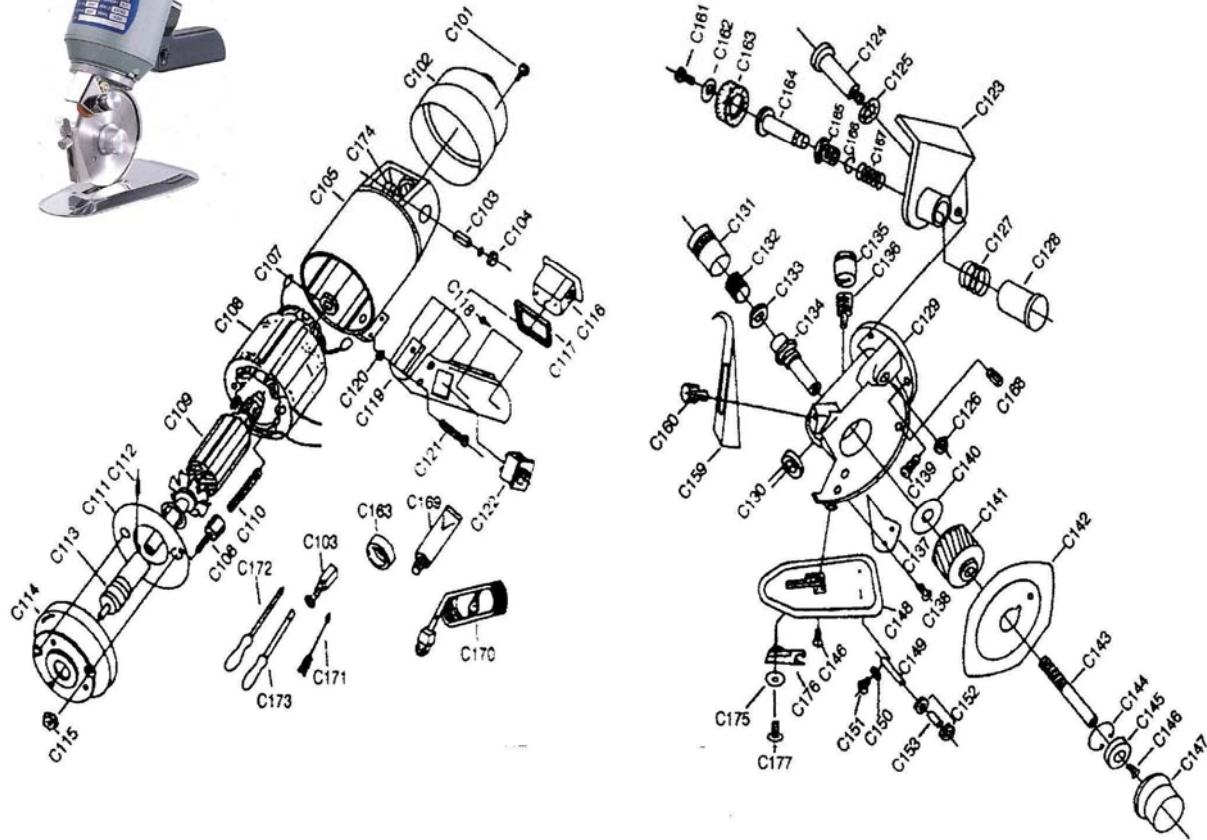

MB90C-115V/220V



MB90-C101	Screw for Cover	MB90-C126	Lock Nut for Bracket	MB90-C151	Screw
MB90-C102	Cover	MB90-C127	Spring	MB90-C152	Rollers
MB90-C103	Carbon Brush/Spring	MB90-C128	Push Knob for Stone	MB90-C153	Pipe
MB90-C104	Cap for Carbon Brush	MB90-C129	Gear Box Fixed Base	MB90-C159	Finger Guard
MB90-C105	Motor Cover	MB90-C130	Bushine	MB90-C160	Screw /Finger Guard
MB90-C106	Socket Screw	MB90-C131	Adjusting Nut	MB90-C161	Washer
MB90-C107	Ball Bearing	MB90-C132	Spring	MB90-C162	Screw
MB90-C108	Stator	MB90-C133	Nut	MB90-C163	Sharpening Stone
MB90-C109	Rotor	MB90-C134	Fixed Shaft/Worm Gear	MB90-C164	Shar Stone Fixed Bas
MB90-C110	Stud Bolt	MB90-C135	Cap for Grease Cup	MB90-C165	Pipe Screw
MB90-C111	Air Guide	MB90-C136	Grease Cup	MB90-C166	Snap Ring
MB90-C112	Spring Pin	MB90-C137	Guide Plate	MB90-C167	Spring
MB90-C113	Worm Gear	MB90-C138	Screw For Guide Plate`	MB90-C168	Oil Felt
MB90-C114	Front Cover	MB90-C139	Screw	MB90-C169	Grease
MB90-C115	Nut	MB90-C140	Washer	MB90-C170	Ckode Com W/earth
MB90-C116	Receptable	MB90-C141	Worm Gear	MB90-C171	Cleaning Brush
MB90-C117	Receptable Bracket	MB90-C142	Blade	MB90-C172	Screw Driver (+)
MB90-C118	Screw	MB90-C143	Screw for Blade	MB90-C173	Screw Driver (-)
MB90-C119	Operation Handle	MB90-C144	Snap Ring	MB90-C174	Carbon Brun Fixed Bas
MB90-C120	Nut for Handle	MB90-C145	Ball Bearing	MB90-C175	Washer
MB90-C121	Screw for Handle	MB90-C146	Screw	MB90-C176	Counter Knife
MB90-C122	Switch	MB90-C147	Lock for Cover Blade	MB90-C177	Screw
MB90-C123	Sharp Stone Bracket	MB90-C148	Base Plate		
MB90-C124	Cinder Shaft	MB90-C149	Roller Shaft		
MB90-C125	Washer	MB90-C150	Washer		