



**FAILURE TO
RETURN THE
WARRANTY SHEET
WITH A COPY OF
THE ORIGINAL
SALES RECEIPT,
WILL VOID
WARRANTY.**

RC-89 Roller Cleaner

Documentation & Warranty Packet

Thank you for purchasing the world's favorite **RC-89 Roller Cleaner**. If properly maintained, this roller cleaner will provide years of trouble free service.

WARRANTY

This model RC-89 Roller Cleaner is warranted against defects for a period of 60 days. Keep your original sales receipt for proof of purchase. ES Manufacturing, Inc. will replace or repair any defective part, either directly, or through the distributor, at the option of ES Manufacturing. ES Manufacturing. Reserves the right to inspect the merchandise at our facility, and is not responsible for transportation cost to ES Manufacturing. ES Manufacturing. Is not responsible for damage, loss, lost production or any other expenses due to the failure of this product. This warranty in no way guarantees the suitability of this equipment for use with any material. No other warranty is expressed or implied.

Copyright 2007 ®
ES Manufacturing, Inc.
2647 24th Street North
St. Petersburg, FL 33713
US / Canada: 800-55ES-MFG
Local / International: 727-323- 4040
Fax: 727-327-9872

ES Manufacturing, Incorporated


Distributed Worldwide

Est.
1973

Engineered Solutions

Manufacturers & Suppliers of fine tools and accessories
for the fiberglass and composite industries

2647 24th Street North, Saint Petersburg, Florida USA

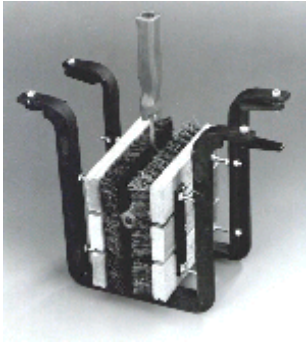

RC-89 Roller Cleaning System

Assembly:

1. Install 1 nut (1/4-28) on each brush assembly shaft roughly 1-1 1/2" from brushes.
2. Set brush assembly into each side of the casting.
3. Use remaining nuts to tighten brushes into position.
4. Position brushes to approximately 1/4 to 1/8" less than the diameter of the roller being cleaned.
5. Adjust cam locks to fit on the edge of the bucket by adjusting the screws up or down and locking the nuts in place.

Instructions:

1. Wear safety glasses and gloves at all times.
2. Dilute cleaner to manufacturer's specifications.
3. Fill bucket to the upper brush level.
4. Use an up and down motion to remove resin from rollers. (Note: If using a "Quick Release" type roller, disassemble the roller and clean the split bushing.)


Suggestions:

When using water diluted emulsifiers, the following procedure is recommended:

Follow specifications for cleaner being used, allow resin to settle to the bottom of the bucket. Remove the RC-89 and install a second bucket. This bucket can be filled with cleaner and used as another cleaning station while waiting for the resin to settle in the first bucket. Once settled, remove resin from first bucket and discard (please discard all waste properly). Clean bucket by using this method of alternating buckets. Your RC-89 can be used simply and effectively. Plastic rollers clean more easily in most acetone replacement materials. If aluminum rollers are preferred, use anodized aluminum only. This will retard any chemical reaction with your cleaner. Plastic handles have a longer life than the wood handles in most cleaners. Wood handles can swell and become loose on their frames.

Replacement parts:

- RC89-001 Machined brushes (Pre-drilled)
- RC89-002 Brush Assembly (Includes brushes, plates, nuts & shafts)
- RC89-003 Cam-lock Assembly

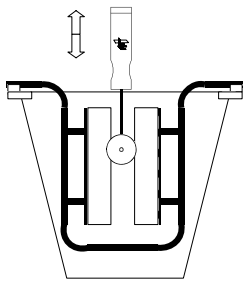

RC-89
Roller Cleaner



Please take a few
Minutes to fill out
the below warranty
sheet. It will help
us serve you
better.

ES MANUFACTURING, INC.
PO BOX 11692
ST. PETERSBURG, FL 33733- 1692 USA

Thomas D. Elder
President, ES Manufacturing, Inc.

Visit our website at
[esmfg.com!](http://esmfg.com)

FOLD HERE

If you have pictures of the products you make, we would like to display them at our domestic and international trade shows.

Date of Purchase: _____

Company Name: _____

Street Address: _____

City / State / Zip: _____

Phone#: _____ Fax #: _____

Contact: _____

Primary Line of Business: _____

Is this your first ES Mfg., Inc. purchase? Yes No

Who did you purchase this unit from?: _____

What was your purchase price?: _____

Which was more important in your purchase?:

Simplicity Effectiveness Price Reputation

Would you like a free catalog?: Yes No

Comments: _____

Please return this sheet in the enclosed envelope.